



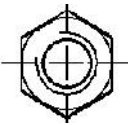


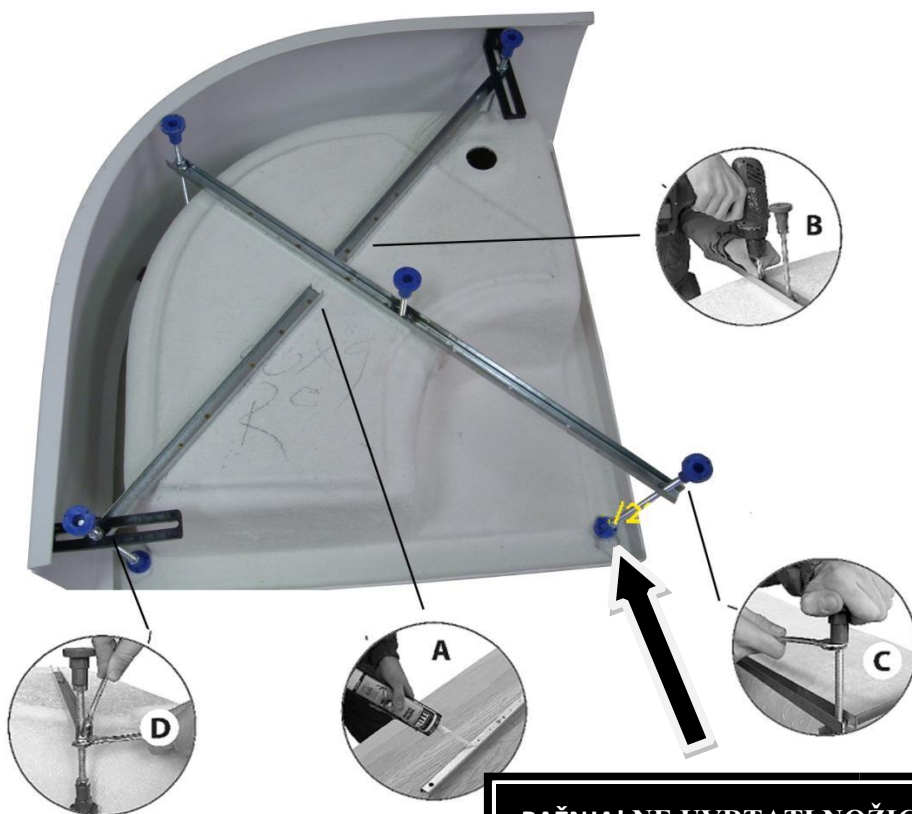


UPUTE ZA MONTAŽU METALNE PODKONSTRUKCIJE LPT11 – PKD

Dio	Količina	
Profil s maticom 20x20x0,8	1 kom	
Profil 20x20x0,8 cm	4 kom	
Navojna šipka M10 37 cm	6 kom	
Navojna šipka M10 10 cm	1 kom	
Matica M10 26 kom/pcs		Plastične nožice 13 kom/pcs
		 Vijak za ivericu 4,5x18 15 kom/pcs
		

Upute za montažu:

- Na sve profile koji dolaze u dodir s dnom kade (do ruba ojačanja dna), nanesite **sanitarni silikon na bazi octa**.
- Uvijte vijke za ivericu u male rupe (Ø5). **PAŽNJA:** Vijke smijete uvrtni **samo u ojačani dio dna kade!**
- Podesite visinu nožica na zadanu mjeru (otprilike 41 cm) i **pažljivo zategnite kontra matice**.
- Zategnite sve matice M10.
- Provjerite visinu svih nožica pomoću **libele**.



PAŽNJA! NE UVRTATI NOŽICE U TIJELO KADE